

JETSTREAM
SWITCHING POWER SUPPLY
JTPS28M User Manual

Specifications and Features:

- 28 Amps MAX, 25 Amps Continuous at 13.8 Vdc
- Front Panel Adjustable Voltage(9-15Vdc)
- Light weight, only 4lbs/1.8kg
- Compact, only 5 3/4"W*4 1/2" H*7"D
- Easy access output:
 - Five-Way binding post for HF/VHF radio
 - Cigarette Lighter Socket for mobile accessories
- Over Voltage protection
- Over Current protection
- Automatic shut-down on fault load
- Lighted Dual Meters: Volt-meter and Amp-meter monitor load continuously.
- Quiet internal Cooling Fan with "FAN ON" LED
- Input Voltage: Switchable AC input voltage
 - 110 Vac at 47-62Hz
 - 220 Vac at 47-63Hz
- Regulation: Works with AC input from 85 to 135 Vac or from 170 to 260 Vac.
- AC Line Fuse:5 Amps

Instruction Manual

Thank you for purchasing the **JETSTREAM** Switching Power Supply . The JTPS28M is designed to supply up to 28 amps maximum current or 25 amps continuous current at 13.8 Vdc.

INSTALLATION:

Before plugging in the JTPS28M in an AC outlet make sure that the proper input voltage is selected on the rear of the unit. Select 115 for 100/110/120 AC operation or 230 for 200/220/240 AC operation. JTPS28M is factory set for 115V.

The loads can be connected to either the 5-way binding posts or to the cigarette lighter socket. Note that any devices that require more than 7 amps must use the 5-Way binding post output. The cigarette lighter socket output has a maximum output of 7 amps.

OPERATION:

DC Adjustment: The DC adjustment control on the front panel is used to set the DC output voltage of the JTPS28M from 9 volts to 15 volts DC. For most HF and VHF radios, set the output at 13.8Vdc.

FAN: The cooling fan on the JTPS28M will operate when the unit is turned ON. The speed of the fan varies depending on the temperature control circuit the speed of the fan, the brighter the yellow LED is the faster the fan is working.

Meter Indicators : The current meter on the JTPS28M indicates the total current being drawn by the accessories connected to the power supply. The voltage meter on the JTPS28M indicates the voltage set for the 5-way binding pose output, and the cigarette socket output .Both meters will be lit when the unit is turned ON. When the DC voltage is adjusting. It won't affect the brightness of the lamps inside the volt/amp meters.

PROTECTION:

The JTPS-28M will automatically shut off if over 30 amps of current is drawn from its outputs. To reset, turn the unit OFF and wait 20 seconds, then turn the unit back on.

The JTPS28M has a 220volt/5amp fuse in the power cord connection on the back of the unit. The JTPS28M has two slots for these fuses. The slot closest to the unit locks the fuse in place and then becomes part of the circuit. The slot at the rear of the tray is a place to store a spare fuse for emergency cases.