



Signalink USB Part Numbers & Options:

Signalink USB:

- **SLUSB4R** - For 4-Pin Round Mic Connector
- **SLUSB8R** - For 8-Pin Round Mic Connector
- **SLUSBRJ1** - For RJ-11 Mic Connector
- **SLUSBRJ4** - For RJ-45 Mic Connector
- **SLUSB5PD** - For 5-pin DIN Data / Accessory Port Connector
- **SLUSB8PD** - For 8-pin DIN Data / Accessory Port Connector
- **SLUSB13I** - For ICOM 13-pin DIN Accessory Port Connector
- **SLUSB13K** - For Kenwood 13-pin DIN Accessory Port Connector
- **SLUSB6PM** - For 6-pin mini DIN Data / Accessory Port Connector
- **SLUSBNC** - Un-terminated cable (bare wires on radio end)

Extra Radio Cables:

- **SLCAB4R** - For 4-Pin Round Mic Connector
- **SLCAB8R** - For 8-Pin Round Mic Connector
- **SLCABRJ1** - For RJ-11 Mic Connector
- **SLCABRJ4** - For RJ-45 Mic Connector
- **SLCAB5PD** - For 5-Pin DIN Data / Accessory Port Connector
- **SLCAB8PD** - For 8-Pin DIN Data / Accessory Port Connector
- **SLCAB13I** - For ICOM 13-Pin DIN Accessory Port Connector
- **SLCAB13K** - For Kenwood 13-Pin DIN Accessory Port Connector
- **SLCAB6PM** - For 6-Pin mini DIN Data / Accessory Port Connector
- **SLCABNC** - Un-terminated cable

Accessories:

- **SLHEAD** - Signalink Programming Header